


## MODEL 171

- 1a Bolts  
 1b Bolts  
 1c Bolts  
 2 Center engine compartment paneling  
 3 Rear engine compartment paneling  
 4 Front engine compartment paneling

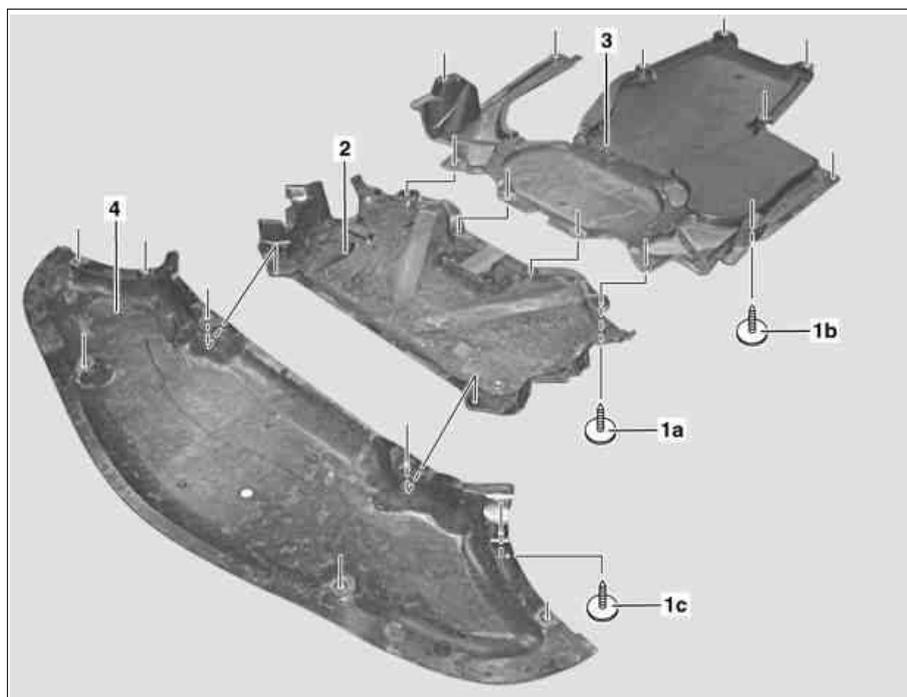

P61.20-2029-06

## Modification notes

11.2.04	Tool newly included	Steps 2, 4, 6	
---------	---------------------	---------------	--

	Remove/Install		
 	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the hydraulic hoist and position the four support plates below the hoist support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
1	Raise vehicle with lifting platform		AR00.60-P-1000V
2	Unscrew bolts (1a) of center engine compartment paneling (2)	 Battery-powered drill/screwdriver	*WH58.30-Z-1007-20A
3	Take off center engine compartment paneling (2)	 Can be removed separately.	
4.1	Unscrew bolts (1b) of rear engine compartment paneling (3)	 Except model 171.473.  Battery-powered drill/screwdriver	*WH58.30-Z-1007-20A
5.1	Take off rear engine compartment paneling (3)	 Except model 171.473.  Can be removed separately.	
6	Unscrew bolts (1c) of front engine compartment paneling (4)	 Battery-powered drill/screwdriver	*WH58.30-Z-1007-20A
7	Take off front engine compartment paneling (4)	 Can be removed separately.	
8	Install in the reverse order		

## Commercially available tools

Number	Designation
WH58.30-Z-1007-20A	Cordless drill/driver